



Paperpod


Assembly Instructions

Pod

This product must be assembled and checked by an adult before use.

The first time you assemble: please pre-fold all creases and take time to complete the assembly without rushing.


COMPONENTS

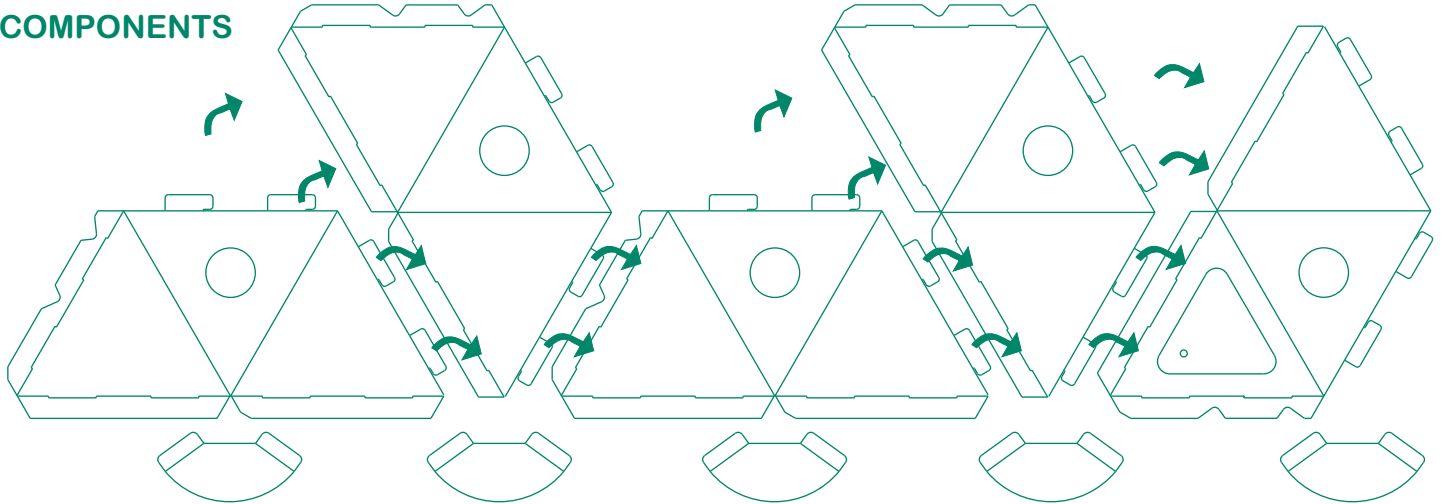


1 Insert all the adjacent locks as indicated by the arrows on this flat blank. Once pushed in the locks need to be pulled down to square up the joints. To locate the last few locks you will need to release and skew some of the already located locks to finish the assembly.

2 Lock in the 5 base corner stabilisers to hold the shape of the pod.

(view from below Pod)

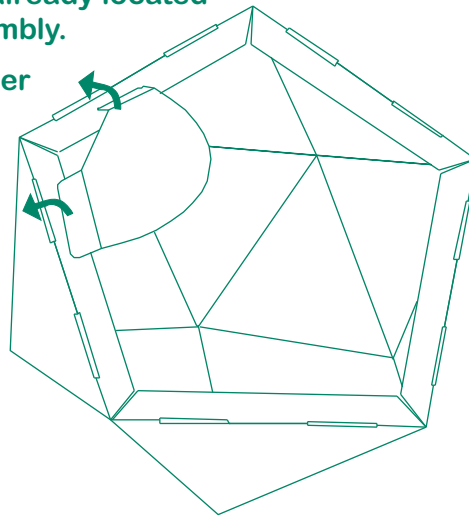

3

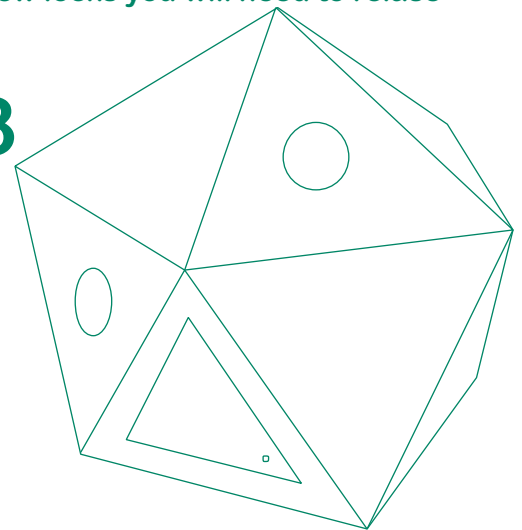

Registered Design
No. 3021143

We have produced a range of environmentally friendly, practical designs made from recycled corrugated cardboard. They are a blank canvas for your child to play, create & decorate using paint, pens or crayons – limited only by your imagination!

Use in the home, childcare setting or school to create a personal touch.

Important

Everything can be folded flat – an ideal storage solution.

Store in a dry place

Keep away from fire

Place on a level, stable surface

For outside play only in dry weather.

Not suitable for children under 18 months

Adult supervision is recommended at all times

For additional safety, check this product regularly for signs of damage during use.

www.paperpod.co.uk

Paperpod Ltd. PO Box 124, TN39 4WE

(Please retain for information)

